

SIZES AND SPECIFICATIONS

		COLONIAL ROUND					SQUARE NON-TAPERED			ROUND NON-TAPERED					TUSCAN ROUND TAPERED					
NOMINAL COLUMN SIZES		6"	8"	10"	12"	16"	5"	5 1/4"	7 1/2"	5"	6"	8"	10"	12"	4"	5"	6"	8"	10"	12"
Total Height (Including caps & bases)	4'	✓•	✓•	✓•	✓•	C	✓•	✓•	✓•	✓•	C	C	C	C	✓•	✓•	✓•	✓•	✓•	✓•
	5'	✓•	✓•	✓•	C	C	C	✓•	✓•	C	C	C	C	C	✓•	✓•	✓•	C	C	
	6'	✓•	✓•	✓•	✓•	C	✓•	✓•	✓•	✓•	C	✓•	C	C	✓•	✓•	✓•	✓•	✓•	✓•
	7'	✓•	✓•	✓•	C	C	C	✓•	✓•	C	C	C	C	C	✓•	✓•	C	C		
	8'	✓•	✓•	✓•	✓•	C	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•	✓•
	9'	C	✓•	✓•	C	C	✓•	✓•				C	C	C		C	C	C	C	
	10'	C	✓•	✓•	✓•	C	✓•	✓•				✓•	✓•	✓•		C	C	✓•	✓•	
	12'			✓•	✓•	C							C	C					C	C
	14'-16'			C	C	C							C	C						
	18'-20'					C														
Top Shaft - Outside Dia./Width		5 3/4	7 3/4	9 3/4	11 3/4	15 3/4	5	5 1/4	7 1/2	5	5 3/4	7 3/4	9 3/4	11 3/4	3	4	4 7/8	6 1/2	8 1/2	10 1/2
Bottom Shaft - Outside Dia./Width		5 3/4	7 3/4	9 3/4	11 3/4	15 3/4	5	5 1/4	7 1/2	5	5 3/4	7 3/4	9 3/4	11 3/4	4	5	5 3/4	7 3/4	9 3/4	11 3/4
Shaft Construction		H	H	H	H	H	H	S	H	H	H	H	H	H	S	S	H	H	H	H
Cap & Base Widths	Regency Cap, Base Wood						7	7	9											
	Regency Base - Aluminum							7	9											
	Tuscan Cap - Wood						8	8	11						5 1/2	6 1/2	8	10	12	14
	Tuscan Base - Wood						8	8	11						6 1/4	7	9	11	13 1/4	16
	Colonial Cap, Base - Wood	9	11	13	15	20				8	9	11	13	15						
	Colonial Base - Aluminum	9	11	13	16	20				8	9	11	13	16						
Load Bearing (Roof loads)		3,100	4,400	5,700	10,500		2,500	2,500	3,500	2,500	3,100	4,400	5,700	10,500						

✓ = Available Plain • = Available Fluted C = Custom H = Hollow Construction S = Solid Construction

Optional: Trimming to length, splitting in half to wrap around existing post.
Interior stain grade columns are available (Clear Oak, Maple, Poplar, Pine and Mahogany).
Aluminum bases (see back page). Ornamental capitals (see back page).

Installation Notes: Columns are not primed or painted and are not for staining applications.
Fluted columns can be trimmed a maximum of 6" for most sizes, custom lengths are available.
Load capacities are for roof loads only and are reduced if loads are not centered.
Balconies, floors and & uplift applications require an internal structural support inside.
Pergolas, trellises and other free standing applications require an internal structural support inside.
Flashing top of column must be installed to prevent water and snow collection.
Concrete support footings must be below grade. Do not pour concrete or sand inside column shaft.

Dimensions are subject to change without notice.
One (1) year limited warranty if installed according to installation instructions.

Before installation: Prime and paint (2 coats) all surfaces (including ends) with Exterior 100% Acrylic Paint - Semi Gloss Finish (According to the paint manufacturers' instructions). No stains or clear finishes are acceptable.
Repaint posts a minimum of every 5 years. Exterior columns must be installed with aluminum base and caulked between shaft and base.
Caps and bases attach to the ends of the column shaft.